


How to set up Electric Wooden Blinds

Setting up your new Electric wooden blind is easy, safe and there's no need for an electrician!

Follow our simple how-to instructions to set up your electric blinds like a pro (without the price tag!).

If you need any assistance along the way please give us a call or [start a live chat](#) with our highly trained customer support team.

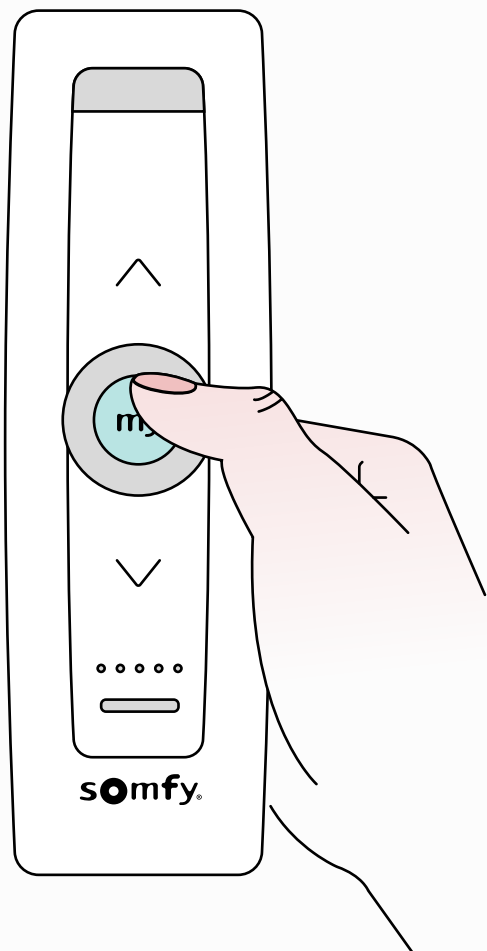

Index

Operating your Somfy remotes	2
Single Channel Remotes	2
Multi Channel Remotes	2
Programming Instructions	3
Pairing a remote with a motor	3
Pairing a second remote	3
Deleting a remote	4
Adding a channel	4
Deleting a channel	5
Adjusting the speed	5
Restore to factory settings	6
Operating Instructions	7
Tilting the slats up	7
Tilting the slats down	7
Lifting the blinds up	8
Lowering the blinds down	9
Tilt programming instructions	10
Adjusting upper limit (Up slat position)	10
Adjusting lower limit (Down slat position)	11
Lift Programming Instructions	12
Setting intermediate limit (My favourite position)	12
Adjusting the upper end limit (Upper blind position)	12
Adjusting the lower end limit (Lower blind position)	13
Adjusting the favourite position	14

Tools you can use:



Paperclip




Pencil


Operating your Somfy remotes

Single Channel Remotes

Situo RTS

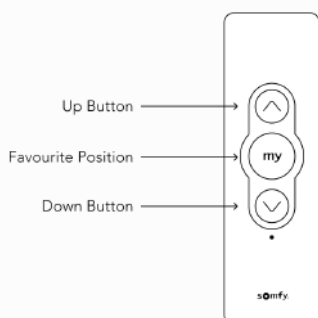


Situo 1 RTS

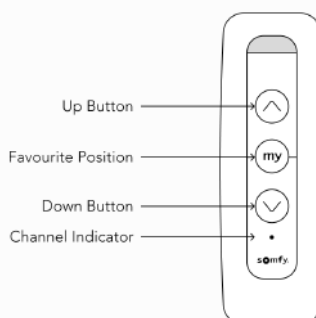


Multi Channel Remotes

Situo 5 RTS

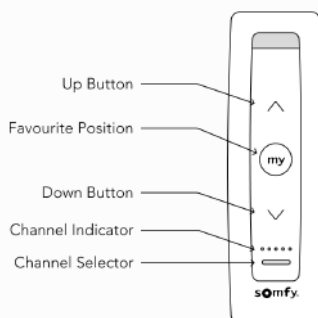

Situo 5 VAR RTS

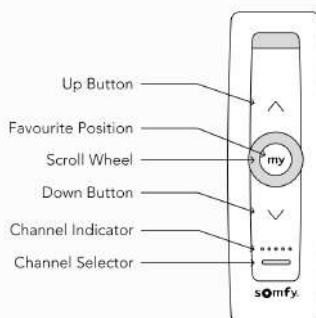


Programming Instructions

Pairing a remote with a motor

*When programming the motor the blind will be required to jog to confirm settings have been programmed, if the blind does not jog press the program button on the motor briefly until the blind jogs once.


*Power should be only connected to the blind being programmed. All other blinds should be disconnected from their respective power while programming is in progress.

Single Channel Remote

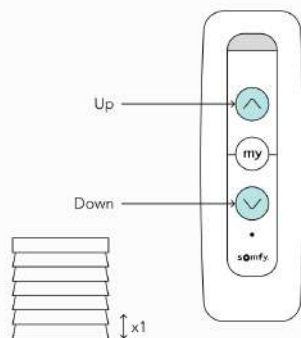


1
On the remote, press and hold the UP and DOWN buttons simultaneously until the blind jogs.

Multi-Channel Remote

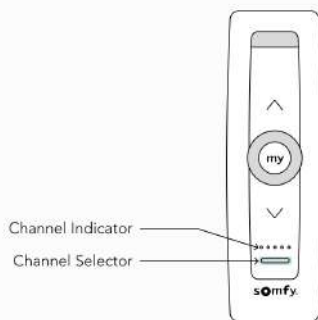

1
Using the Channel Selector select the desired channel (channel indicator will briefly be lit).

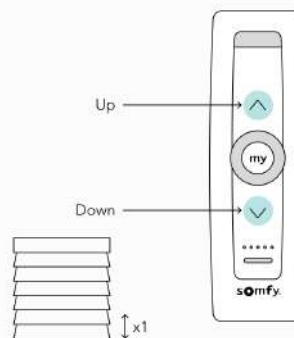


2
On the remote, press and hold the UP and DOWN buttons simultaneously until the blind jogs.


Pairing a second remote

*Note: Finish programming the first remote before pairing a second remote

Single & Multi - Channel Remote

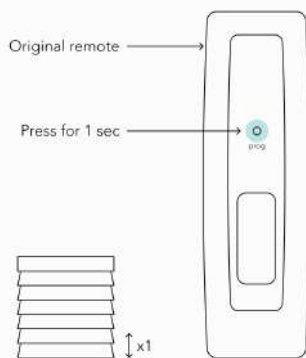


1
Using a paperclip or pen, press and hold the PROGRAM button on the original remote until the blind jogs once.

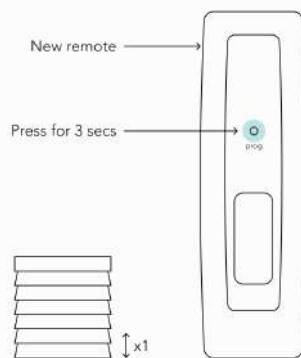

2
Using a paperclip or pen, press and hold the PROGRAM button on the new remote until the blind jogs once.
The second remote is now added to the memory and can be used to operate the blind.


Deleting a remote

Single & Multi - Channel Remote

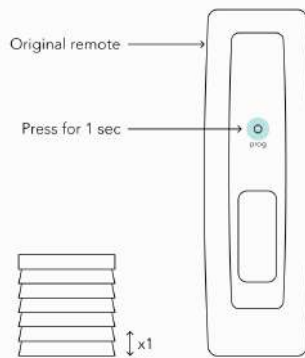

1

Using a paperclip or pen, press and hold the program button on the original remote until the blind jogs once.

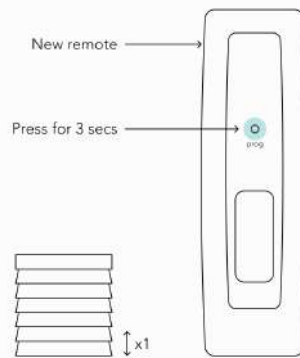


2

Using a paperclip or pen, press the program button on the second remote until the blind jogs once. Second remote is now deleted and will not operate the blind.


Adding a channel

Multi-Channel Remote

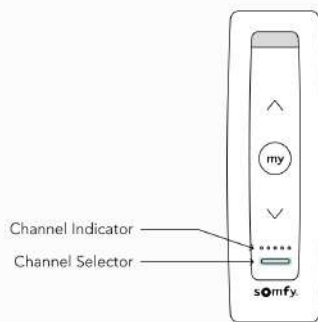


1

Select the desired channel you wish to duplicate by momentarily pressing the channel selector button on the multichannel remote.

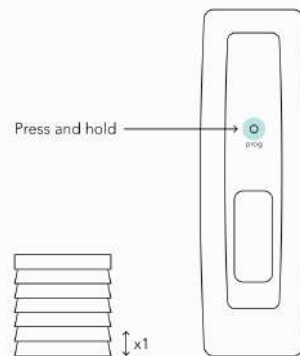

2

Using a paperclip or pen, press and hold the program button on the remote until the blind jogs once.

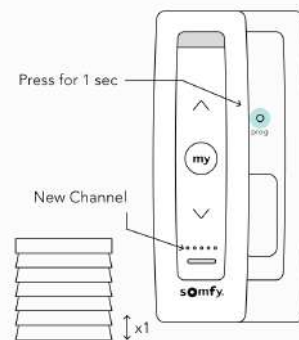


3

Ensuring you are on the new channel press the program button on the remote until the blind jogs once. Additional (new) channel is now added to the motor memory and can be used to operate the blind.

Deleting a channel

Multi-Channel Remote

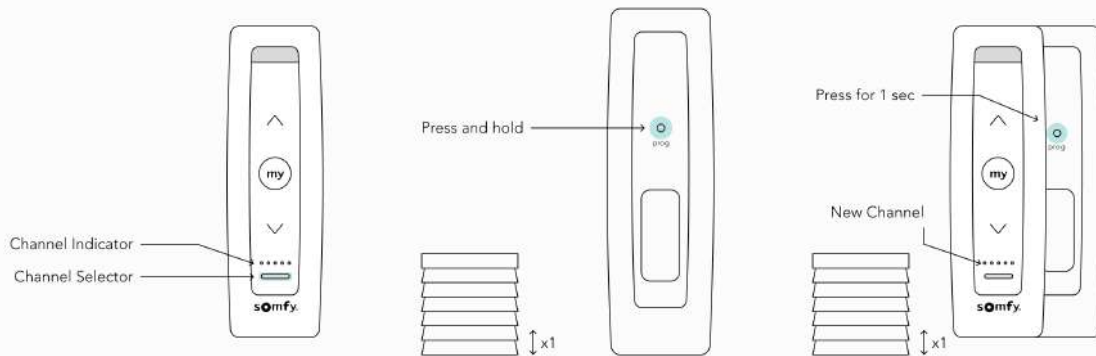

1

On the remote select the desire channel to be deleted.

2

Using a paperclip or pen, press and hold the program button on the remote until the blind jogs once.


3

Press the program button on the remote until the blind jogs once. Channel is now deleted from the motor memory and will not operate the blind.

Adjusting the speed

* Motor has 4 speed settings, each action decreases speed by 1. When lower speed has been reached, the blind will no longer respond.

Decreasing the tilt speed

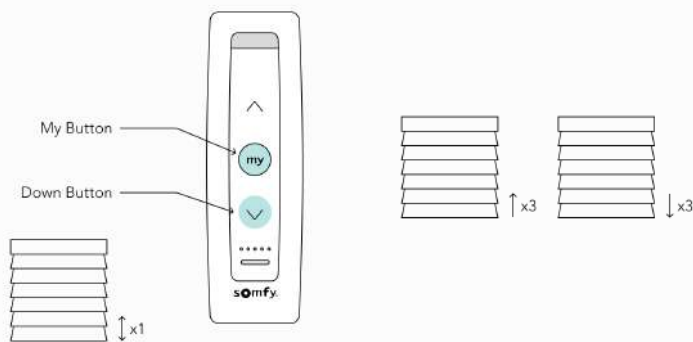


1

Press the MY (stop) and DOWN buttons until the blind jogs. Speed has been decreased by 1.

Important

There are 4 speed settings, repeat as needed. The minimum setting has been reached when the motorised product briefly moves 3 times in one direction and then 3 times in the other direction.

Increasing the tilt speed

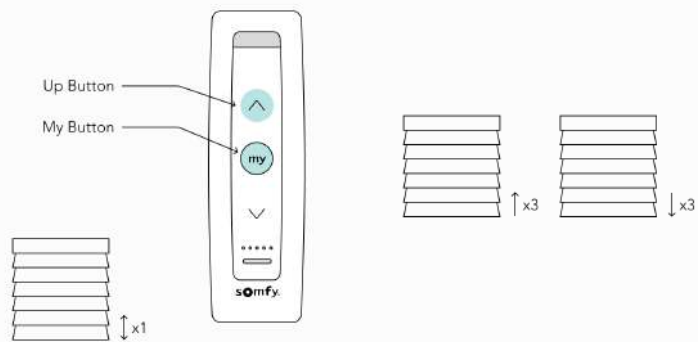

1

Press the MY (stop) and UP buttons until the blind jogs. Speed has been increased by 1.


Important

There are 4 speed settings, repeat as needed. The maximum setting has been reached when the motorised product briefly moves 3 times in one direction and then 3 times in the other direction.

Restore to factory settings

*All remotes and limits will be erased from the motor memory. Motor is now reset to factory mode.

Delete all previous settings

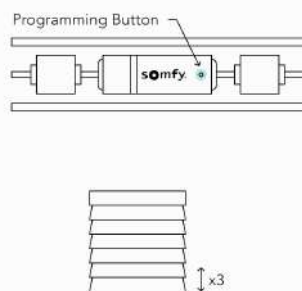


1

Using a paperclip press and hold the program button located on the top of the motor casing until the blind jogs 3 times (approx. 12 secs.)

Operating Instructions

Tilting the slats up


Situo RTS

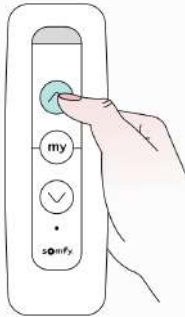

1

Press and hold the UP button to open the slats. Release the button when the desired position is reached.

Situo Var RTS

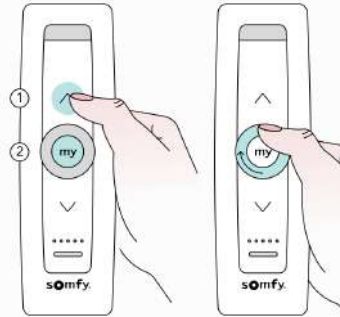

1

Press or scroll on the UP button/scroll wheel to open the slats. Press the MY button to stop the movement of the slats (button operation only).

Tilting the slats down


Situo RTS



1

Press and hold the DOWN button to close the slats. Release the button when the desired position is reached.

Situo Var RTS

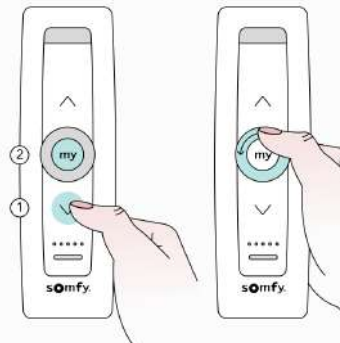


1

Press or scroll on the DOWN button/scroll wheel to close the slats. Press the MY button to stop the movement of the slats (button operation only).

Lifting the blinds up

Situo RTS

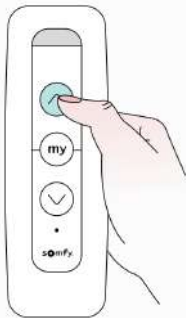

1

Briefly press the UP button to lift the blinds.



2

Press the MY button when the desired position is reached.

Situo Var RTS



1

Press the UP button to lift the blinds.



2

Press the MY button when the desired position is reached.

Lowering the blinds down

Situo RTS



1
Briefly press the DOWN button to lower the blinds.



2
Press the MY button when the desired position is reached.

Situo Var RTS



1
Briefly press the DOWN button or scroll DOWN the wheel to lower the blinds.

 


2
Press the MY button when the desired position is reached.



Tilt Programming Instructions

Adjusting upper limit (Up slat position)


Single and Multi Channel Remote



  
1
Press the UP button. Blind will tilt to the pre-set UP limit.



 2
Once the blind stops at the pre-set upper limit, press and hold the UP and DOWN buttons simultaneously until the blind jogs.




3
Press and hold either the UP or DOWN button to adjust slats to the new position.

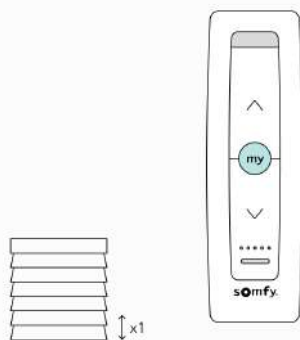

4
Press and hold the MY (stop) button until the blind jogs. New Upper Limit (up stop position) is now added to the memory.


Adjusting lower limit (Down slat position)

 Single and Multi Channel Remote




1

 Press the DOWN button. Blind will tilt to the pre-set DOWN limit.





2

 Once the blind stops at the pre-set down limit, press and hold the UP and DOWN buttons simultaneously until the blind jogs.



3

 Press and hold either the UP or DOWN button to adjust slats to the new position.

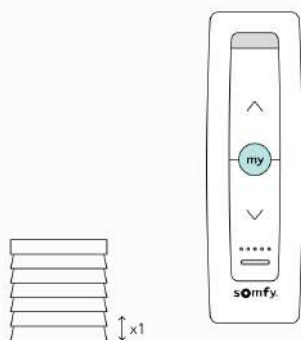





4

Press and hold the MY (Stop) button until the blind jogs. New Lower Limit (down slat position) is now added to the memory.

Lift Programming Instructions

Setting intermediate limit (My favourite position)

    Single and Multi Channel Remote



1

Press the UP or DOWN button until the blind slats reach a desired favourite position, then press the MY (stop) button to stop. If necessary, adjust the desired slat position by pressing and holding either the UP or DOWN button.

2

 
 
 
 
Press and hold the MY (stop) button until the blind jogs. Favourite my slat position is now added to the memory.

3

Activate the blind favourite position by pressing the MY (stop) button from any slat position. Slats will move to the closed down position prior to stopping at the programmed my position.

Adjusting the upper end limit (Upper blind position)

Single and Multi Channel Remote



1


Press the UP button to move the blind to the upper end limit.

2

Press and hold the UP and DOWN buttons simultaneously until the blind jogs.

3

Press and hold either the UP or DOWN button to adjust slats to the new position.

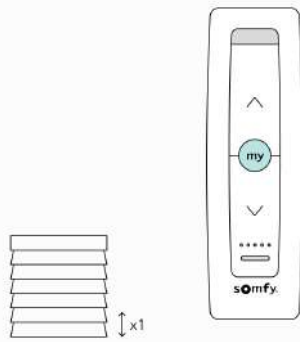


4

To confirm the new limit press and hold the MY (stop) button until the blind jogs.


Adjusting the lower end limit (Lower blind position)

 Single and Multi Channel Remote




1

 Press the DOWN button to move the blind to the lower end limit.




2

 Press and hold the UP and DOWN buttons simultaneously until the blind jogs.



3

Press and hold either the UP or DOWN button to move the blind to the new desired position.

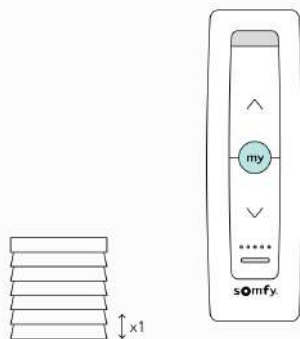


4

To confirm the new limit press and hold the MY (stop) button until the blind jogs.

Adjusting the favourite position

Single and Multi Channel Remote

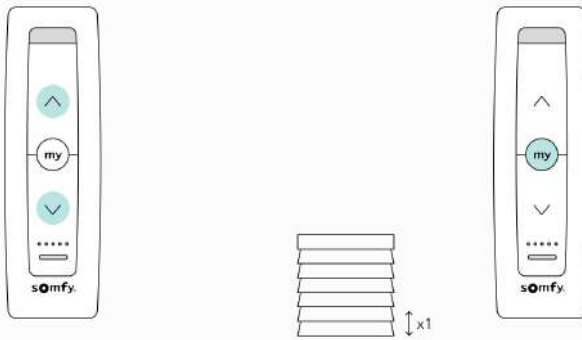

1

Press the UP or DOWN button until the blinds reach the desired favourite position.

2

Press the MY button until the blind jogs. Favourite position has now been set.